

Flash Beam Image to SD Card

The purpose of this document is to describe the process for flashing the Beam image to a SD card.

Required Tools



- Symptomatic BeamPro
- 1 SD card (4 GB or bigger)
- Beam OS 2.22.14 image file
- Image flashing software (balenaEtcher recommended)
- SD Card reader

Download Software and Image

1. Download the Beam OS 2.22.14 image file provided below:
<https://storage.googleapis.com/st-public-resources/rpd/beam-live-disk-2.22.14.zip>
2. Download the balenaEtcher writing software. A link to the suggested installer is here: <https://www.balena.io/etcher/>

Flash SD

1. Insert the SD card into your SD card reader
 2. Open the balenaEtcher writing software
 3. Choose 'Flash from file'
 4. Select the file named: beam-live-disk-v2.22.14.img
 5. Choose "Select target"
 6. Select the name of the storage device
 7. Click "Flash" to begin the imaging process
- *You may be required to enter your system admin password*
8. Wait for the "Flash Complete!" message
 9. Close balenaEtcher
 10. Eject your SD card

Continue to SSD ReImaging



Upon successfully imaging your new SD card, follow the instructions on the *BeamPro SD Exchange Instructions* document shared by your Beam Support Specialist.

For additional support, email support@beam-robots.com